

LIBERATE



PLUGFONES®

page: 1



**EARPLUGS
WITH AUDIO**

THE PLUGFONES EXPERIENCE

In order to enjoy the truly unique world our products offer, there are a few important things to remember. First and foremost, Plugfones are earplugs – premium, custom-made foam and silicone earplugs – and it's critical that the plugs are inserted correctly.

Careful insertion


Pinch down the foam tip. Reach over the head and pull the top of the ear up and back. Push the earplug into the ear canal. Fit to create SoundSeal™. Remove carefully.



Replacing Earplugs



Squeeze the base of the tip while securing the speaker housing. Separate with a quick pull motion. Discard old earplug tip.

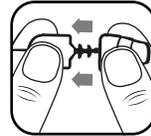

Holding the base of the new tip, press the speaker securely. Click into place.

CONNECTING

On & Off: Press and hold the multifunction button for two seconds to turn the unit on. The light will quickly flash red and blue, then flash blue intermittently to indicate the unit is powered on. To power the unit off, press and hold the multifunction button for three seconds. The light will flash red once while the unit is powering off.

Pairing: With the unit powered off, press the multifunction button for five seconds. The light will alternate flashing red and blue while pairing. The light will quickly flash blue three times when successfully paired.

Charging: Fully charge your Plugfones before their first use. To charge the unit, plug the included Micro USB charging cable into the charging port on the controller module. Plug the other end of the cable into a USB-compatible wall charger or computer USB port. A solid red light indicates the unit is charging. A solid blue light indicates the unit is fully charged. When the battery is low, the light will flash red once every minute.



LIBERATE



PLUGFONES®

page: 2



**EARPLUGS
WITH AUDIO**

AUDIO & CALL CONTROL

Next Track: While listening, press and hold the volume up button for two seconds.

Play & Pause: Press the multifunction button to play. Press again to pause.

Previous Track: While listening, press and hold the volume down button for two seconds.

Volume: Quick-press the volume up or volume down buttons to adjust the volume. A noise prompt will indicate when you've reached maximum volume.

If Your Device Has A Microphone:

Answer Call: As a call comes in, quick-press the multifunction button.

End Call: During a call, press the multifunction button.

Redial: Double-click the multifunction button.

Reject Call: As a call comes in, press the multifunction button for one second.

LED INDICATORS

Charging: Solid red light

Fully Charged: Solid blue light

Low Battery: Light flashes red once per minute.

Pair: Light alternates flashing red and blue

Pairing Success: Light quickly flashes blue three times

Power Off: Red light turns off

Power On: Light flashes red and blue for one second

Standby When Not Playing: Light flashes blue twice every three seconds

Standby When Playing: Light flashes blue once every two seconds

If Your Device Has A Microphone:

Incoming Call: Light slowly flashes blue



LIBERATE



PLUGFONES®

page: 3




**EARPLUGS
WITH AUDIO**

FLEXIBLE CABLE COLLAR

Install Collar: To install the flexible cable collar on your Plugfones Bluetooth unit, line up the left end of the collar with the cable at the innermost edge of the battery module. Gently thread the cable into the channel of the collar until it sits securely between the battery module and the control module. Ensure that the collar does not cover the small silicone sleeves protruding from each end of the battery and control modules.

Remove Collar: To remove the flexible cable collar, gently pull the cable out of the channel starting at the innermost edge of the control module. Keep the battery and control modules in a neutral position while removing the cable completely from the collar.

Features & Plugs

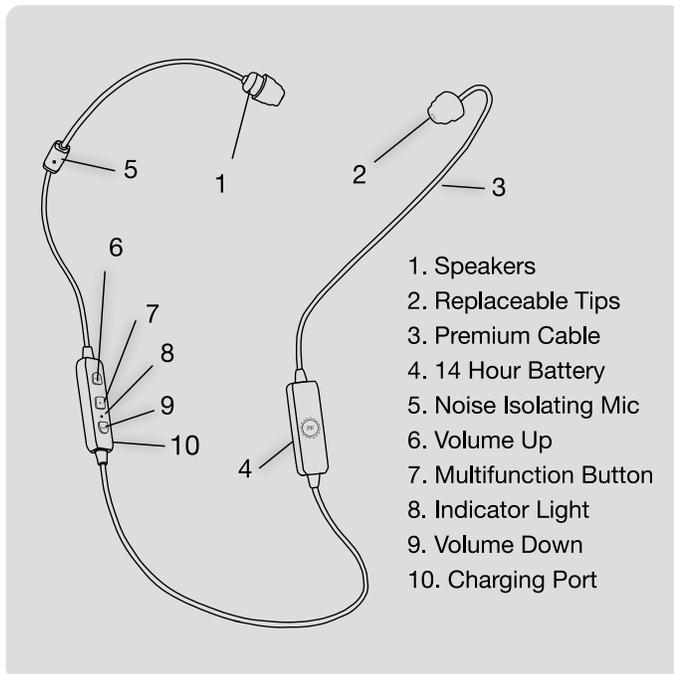

COMFORTIERED FOAM

29dB
NOISE
REDUCTION



COMFORTIERED SILICONE

27dB
NOISE
REDUCTION

