


PLUGFONES® SOVEREIGN

page: 1

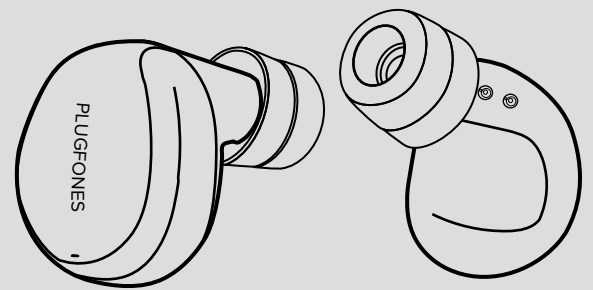

EARPLUGS WITH AUDIO

INSERTION GUIDE

Optimal hearing protection comes from a proper seal with the earplug in the ear canal.


1. Select a Tip

The first thing to consider is which size tip you want to use. Both are comfortable but vary in the amount of noise they block.

26dB
NOISE
REDUCTION



Foam
SINGLE TIER

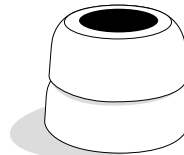


Silicone
COMFORTIERED

21dB
NOISE
REDUCTION

2. Careful insertion

Reach over the side of the head and lift gently on the top of the ear to open up the ear canal.

Insert the plug tip into the ear canal while rotating the device slightly up and in, allowing the earplug to snugly set into place.

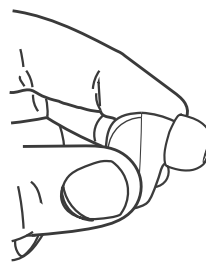


3. Earproof for Secure Fit

Earplugs make a sudden drop in ambient environment noise when inserted properly. With the earplugs in place, try cupping your hands over plugged ears. If the sound levels drops significantly by covering your ears, then the earplugs are likely not securely in place. Repeat step 2 again for a proper seal. Sovereign, when fitted correctly, has the tip securely in the ear canal.



PLUGFONES® SOVEREIGN

page: 2

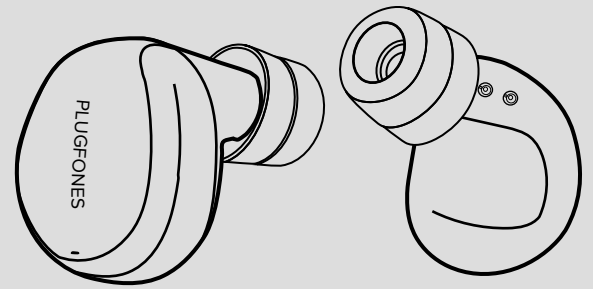

EARPLUGS WITH AUDIO

CONNECTING

Auto power on: Take out of case

Manual Power on: R or L press and hold for 2 seconds

Auto Pairing R and L to Each other: Take both out of case

First time pairing to Device:

Turn on the connecting Bluetooth device and place it within 3 feet (1 meter) of the Sovereign. Once paired to each other, select 'Sovereign' in the bluetooth menu on device. After initial pairing, they will automatically remain paired.

CONTROLS

Answer Call: L or R Short press 2 times

Decline Call: L or R Long press 2 seconds

Hang Up: L or R short press 2 times

Switch between earbuds and phone during call: L or R Long press for 2 secs.

Voice Assistant (Siri/Google/Alexa):
L or R Long press 3 seconds

Voice assistant close: L or R long press
3 seconds

Play/Pause: L or R short press 1 time

Vol + : R Short Press 2 times

Vol - : L Short Press 2 times

Skip Track Forward: R Short press 3 times

Skip Track Backward: L Short Press 3 times

WELCOME TO THE
PLUGFONES FAMILY.
FIRST IN AUDIO HEARING PROTECTION.

